

SEGA FLASH BEATS DIP SWITCH SETTINGS

DIP SW 1

OPTION	COIN SETTING				5	6	7	8
	1	2	3	4				
1 COIN 1 CREDIT : #0	OFF	OFF	OFF	OFF				
2 COIN 3 CREDITS : #1	ON	OFF	OFF	OFF				
5 COIN 6 CREDITS : #2	OFF	ON	OFF	OFF				
2 COIN 1 CREDIT : #3	ON	ON	OFF	OFF				
3 COIN 2 CREDITS : #4	OFF	OFF	ON	OFF				
5 COIN 3 CREDITS : #5	ON	OFF	ON	OFF				
3 COIN 1 CREDIT : #6	OFF	ON	ON	OFF				
5 COIN 2 CREDITS : #7	ON	ON	ON	OFF				
4 COIN 1 CREDIT : #8	OFF	OFF	OFF	ON				
5 COIN 1 CREDIT : #9	ON	OFF	OFF	ON				
6 COIN 1 CREDIT : #A	OFF	ON	OFF	ON				
1 COIN 2 CREDITS : #B	ON	ON	OFF	ON				
1 COIN 3 CREDITS : #C	OFF	OFF	ON	ON				
1 COIN 4 CREDITS : #D	ON	OFF	ON	ON				
1 COIN 5 CREDITS : #E	OFF	ON	ON	ON				
FREE PLAY : #F	ON	ON	ON	ON				

DIP SW 2

		CREDIT TO START 1P		CREDIT TO START VS		CREDIT TO CONTINUE		7	8
		1	2	3	4	5	6		
1 CREDIT	TO START	OFF	OFF						
2 CREDITS	TO START	ON	OFF						
3 CREDITS	TO START	OFF	ON						
4 CREDITS	TO START	ON	ON						
1 CREDIT	TO START			OFF	OFF				
2 CREDITS	TO START			ON	OFF				
3 CREDITS	TO START			OFF	ON				
4 CREDITS	TO START			ON	ON				
1 CREDIT	TO CONTINUE					OFF	OFF		
2 CREDITS	TO CONTINUE					ON	OFF		
3 CREDITS	TO CONTINUE					OFF	ON		
4 CREDITS	TO CONTINUE					ON	ON		
ADVERTISE SOUND	内部 (internal)								OFF
	外部 (external)								ON