

LINDBERGH VBIOS UPDATE DVD Work Description

Readers are targeted at game console owners, administrators, and operators. In conjunction with the instruction manual of the game console, please read this manual carefully, understand well, and start the replacement work. In the case of not obtaining normal functions, do not touch the internal system, unplug the power plug from the outlet, and contact the "Contact Information" provided in the instructions for handling each cabinet.

In this book, however, it does not extend to personal accidents or material compensation accidents, but the term "important" that was made important information, (symbol) is used to enclose it with a thick border.

significant

If this display is ignored and mishandled, it indicates that the product could not perform properly and that it would cause a function stop.

thick border.

Definition of store maintenance man, technician (serviceman)

Parts replacement, maintenance and inspection, and possible damage in the event of an abnormality should

Warning

If you do not have knowledge or skills, do not perform tasks that are instructed to be performed by "store maintenance man" or "technician" in the work description described in this document, or that are not described in this document. This may cause a serious accident such as an electric shock.

could be performed by a store maintenance man or a technician (serviceman). This book instructs you to perform particularly dangerous tasks by a professionally knowledgeable technician.

This document defines store maintenance man and technician as follows:

Maintenance stores: Have maintenance experience such as AM equipment and vending machines (hereinafter, vending machines),

A person who is involved in the maintenance and management of equipment through the assembly and installation of equipment, maintenance and inspection of units and consumables, etc. on a daily basis in the AM installation or store under the management of the owner and operator of the product.

Shop Maintenance Man

Action: Assembly installation, maintenance and inspection of AM equipment and vending machines, replacement of units and consumables.

Technician: AM Equipment Manufacturer involved in equipment design, manufacturing, inspection, maintenance services

a person who is Those who have expertise in electrical, electronic, and

mechanical engineering equivalent to or better than graduating from an industrial high school and are involved in the maintenance and repair of AM equipment on a daily basis.

Technician behavior: Assembly installation of AM equipment and vending machines, electrical · electronic · repair and adjustment of mechanical parts.

○ Handling notes

Warning

- Follow the steps in this document. If you do not follow the instructions in this document, there is a risk of an electric shock accident.
- Be careful not to damage the wiring. If damaged, it will be the original cause of fire, weight, and short-circuit accidents.
- technically engineers with electrical knowledge, please do not work at all. If a person other than an engineer performs the work, it may cause a serious accident such as an electric shock. If you do not have a technician, please contact us at the "Contact Us" section of the manual that came with the game machine.
- The connector connection direction is fixed. If you try to connect in the wrong direction and apply an unreasonable load, it may damage the wire or board. Damage may cause a fire • electric shock • short accident circuit.

V-


-"

"

significant

- ## How to take a disk

If you hold it with both hands, if you hold it with one
 h a n d
 They have both ends of a disk across Place your finger on the center
 h o l e a n d t h e o u t e r c i r c u m f e r e n c e .

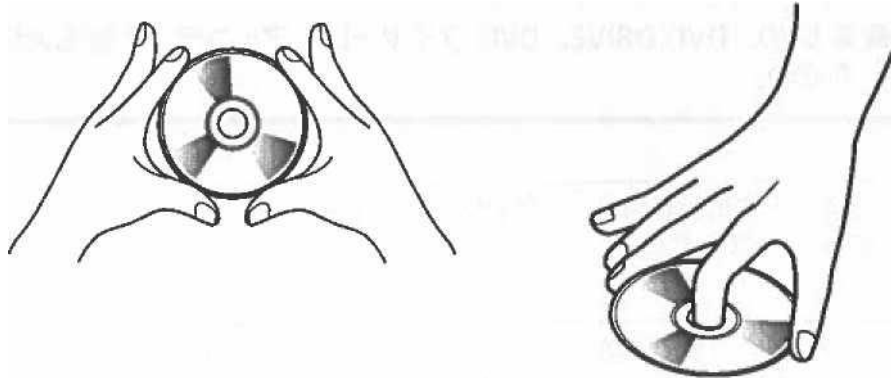


○Soft installation / update procedure

significant

- Read the instruction manual for each cabinet and the DVD DRIVE service manual for LINDBERGH carefully to begin the update.
If you do not update this DVD, there will be an operational failure, so be sure to perform an update.
- This product does not require the key tip to be replaced. Since the key tip is not included, please use the attached key tip as it is. This product operates on the key tip of the product below.
 - THE HOUSE OF THE DEAD 4
 - THE HOUSE OF THE DEAD 4 SPECIAL
 - THE HOUSE OF THE DEAD 4 SPECIAL (MANAGEMENT)
 - POWER SMASH 3
 - Friend Fishing
- ◆ update work on a game program, the game program that was running until now is erased from LINDBERGH. After the work is finished, please install it again using your game disc.
- ※ during the update of the system may cause LINDBERGH to fail.
- ※ 30 seconds after the switch is energized, the TRAY will not come out of the DVD DRIVE and initially in the early 1990s.
- The TRAY of the DVD DRIVE is put in and out while energized. Trays cannot be in or out when the power is turned off.
- ◆ keep these DVDs, DVD DRIVE, and DVD wires in a safe place after the update.


- 7 Connect the DVD DRIVE by referring to the instruction manual for each cabinet and the DVD DRIVE service manual for LINDBERGH.

 2 ユリアネジ1本を外して、DVD DRIVE のケースリッドを取り外します。

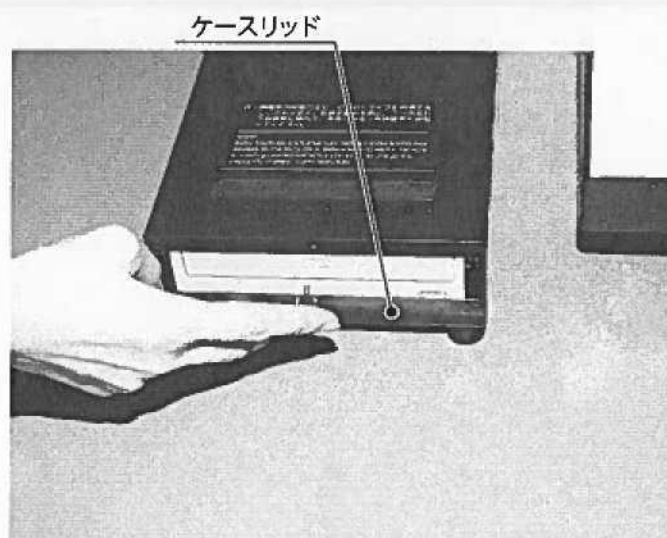

3 LINDBERGH The main switch of the on-board tube body ON and then turn it on.*

4 Wait 30 seconds after energizing, then press the DVD DRIVE switch. The tray comes out. Set the VBIOS UPDATE disk that came with the kit to the tray. Be sure to raise the label surface.

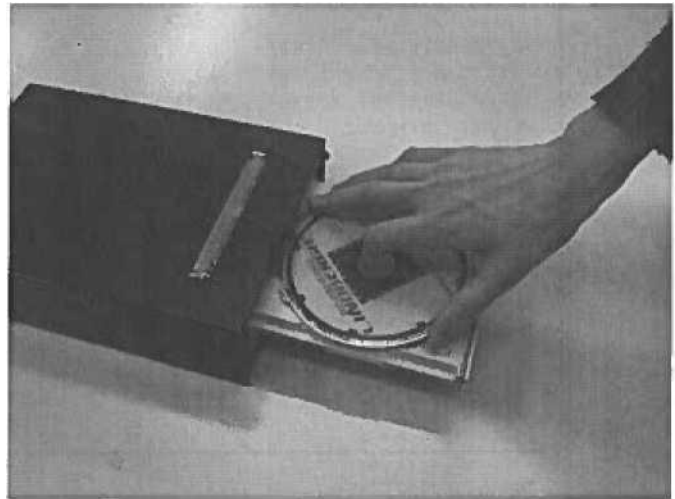

DVD DRIVE Press the switch, The tray will return.

6 VBIOS UPDATE The installation of the update starts from the disk. On the screen "Check Release Image. - XX. XX%. Show :",

* If the game software before the update starts, turn it back on * Turn off the main switch on the housing and turn it on after 5 seconds or more : > However, the projector equipped model (Amie fishing) should be turned on after 5 minutes or more for lamp cooling time. Check the nectar connection.

■ V VBIOS update screen will be displayed "

```
#####  
m VBIOS UPDATE ###  
Checking Device
```

Checks the type of U graphic BD.

○ If you recognize a graphic BD that needs to be updated, go to step 9, which is displayed in the figure below.

```
#####  
### VBIOS UPDATE ##  
#  
*#####  
Checking Device OK
```

If you recognize a graphic BD that does not need to be updated, the figure below is displayed. The update will be cleared, so go to step 11.

```
m VBIOS UPDATE ###  
##*##### Che  
cking Device SKipped! Mis  
match device!
```

Complete]

VBIOS. UPDATE UNINSTALL Start!

9 Check the VBIOS burdington .

For versions that need to be updated, go to step 10, as shown in the figure below.

```
m VBIOS UPDATE ### ##  
#####  
Checking Device  
OK  
Checking Bios versi  
on OK  
VBIOS VERSION *##*##<##^ -> ##,*#*****  
Press PSW1/TEST to Next
```

In the case of a purge that does not need to be updated, the following figure is displayed. Updates are cleared so the steps11Go to_D

If the purge acquisition fails, the figure below is displayed. LINDBERGHRepair ofI'm going to make i

```
#####
### VBIOS UPDATE ### #####
##### Checkina Device OK
### VBIOS UPDATE ### #
Checking BIOS Version Already
updated complete!## Ch
ecking Device OK
Closing UpdatesUNSTALL Start!
Error! Check failed In
complete!
```

t. It's a good time.

When you press the test button, VBIOSupdates are made. To update30It will take about 2 seconds.

10

Materials
VBIOS UPDATE ###
Material suppression

UPDATING
DO NOT TURN OFF THE POWER /

Rotating disp
lay during up
date


```
#####< #####
### COMPLETED ###
Materials
```

PLEASE TURN OFF THE POWER

If it is successful, the figure below will be displayed. Turn it back on. Turn off the main switch on the enclosure and turn it on after more than 5 seconds. If it works, proceed to step 11.

```
Materials
### VBIOS UPDATE ### #
#####
```

Error! Update Failed!!

If the update fails, the figure below is displayed. LINDBERGH please repair it.

H 「VBIOS_UPDATE UNINSTALL Completed/PLEASE TURN OFF THE POWER」 If it is displayed as It is a new end.

Press the DVD DRIVE switch, remove the tray, and remove the VBIOS UPDATE disc.

f. Place the DVD-ROM of the game program that was running before the update in the tray. f J Be sure to raise the label face.

| Press the j DVD DRIVE switch. The tray returns.

1² turn the power back on. Turn off the main switch on the enclosure and turn it on after more than 5 seconds.

The software is installed from the DVD-ROM. On the screen, see Check Release Image. · · XX.
| 0 XX%.

If you display the game screen, the installation is finished. Depending on the game, the installation time and / is about 5 minutes. Press the DVD DRIVE switch, remove the tray, and remove the DVD-ROM.

I'm not here.

Turn off the main switch.

Unplug the two DVD wire connectors from LINDBERGH.

j y Install the door in the cabinet 6

Install 1 dvd DR or VE case lid and secure it with a single Yulia screw.

, Now store DVD DRIVE, DVD wire, DVD soft kit, VBIOS UPDATE disc in a place where there is no dust or cigarette smoke ▲ 0.



ly does not return when the power is turned off.⁴

