COCKTAIL TABLE	UPRIGHT

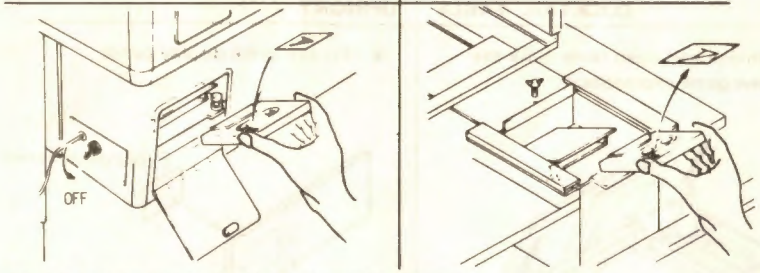

PRECAUTIONS WHEN RUNNING TAPES.

1. Do not turn off power switch or pull out power plug.
2. Do not touch cassette deck.
3. Do not push eject button.

- While the tape is running and the game memory is being transferred the time is shown on screen. When the timer reaches "0" the new game is ready to play.
- When a cassette is defective or not accompanied by a proper key module, in this case "Cassette Error" appears on screen. Please turn power off and check the procedures again from the beginning, then resume feeding.

If error persists, please consult your nearest distributor.

- Close and lock the cassette door.

STORAGE

- Keep away from strong magnets including airconditioners, TV sets, refrigerators electric motors.
- High temperature and humidity may ruin the cassettes.
- Do not leave in direct sunlight.

CONTENTS OF DECO GAME KIT

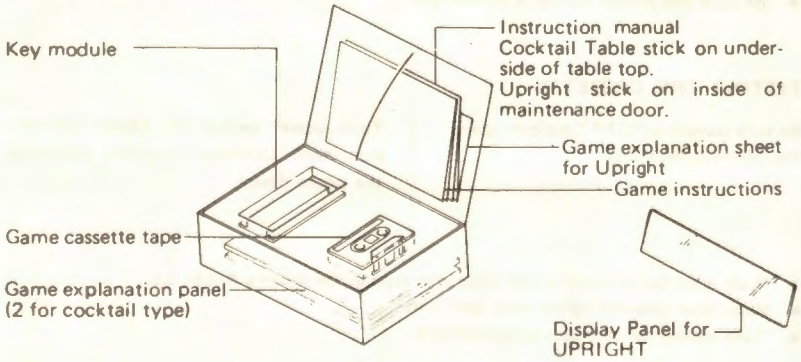

EMN—50499

BurgerTime™

GAME EXPLANATION SHEET DT - 1265

Use 4-way lever

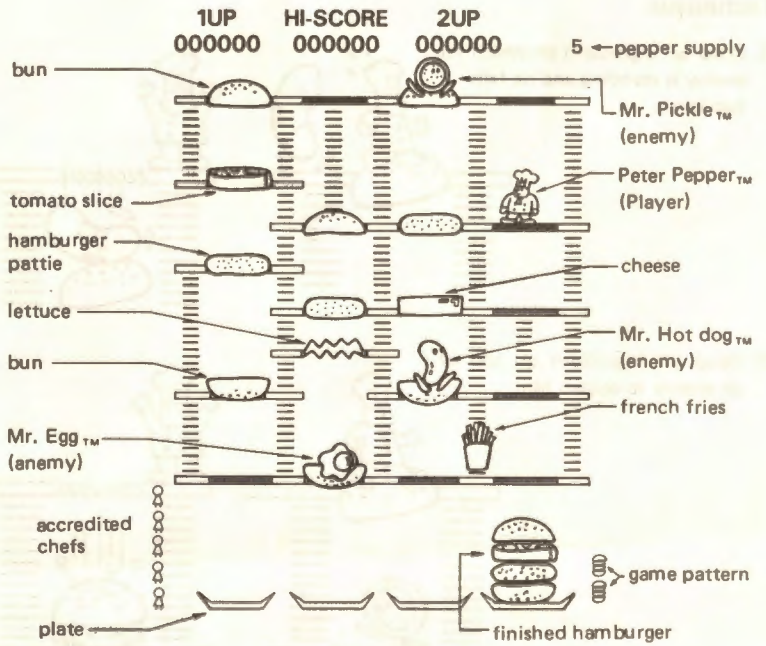

DATA EAST CORPORATION

HOW TO PLAY

Use 4 Way Lever to control Peter Pepper$_{TM}$ and drop ingredients (buns, hamburger patties, tomato slices, etc.) on plate to make hamburgers.

You are out if you touch an enemy (Mr. Hot dog$_{TM}$, Mr. Pickle$_{TM}$, Mr. Egg$_{TM}$)

Press red button to sprinkle pepper and stop enemy. (you can pass by a stopped enemy)

Take french fries, ice cream cones, etc. to increase your supply of pepper.

Geme is over when Peter Pepper$_{TM}$ runs out.

Technique

1) Drop an ingredient on which the enemy is standing and he falls two levels.

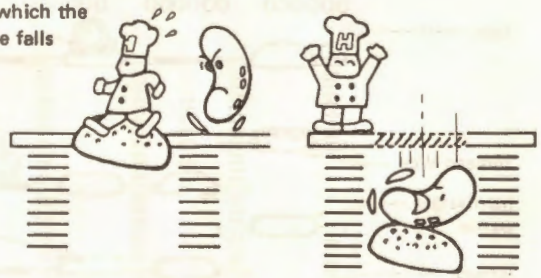

2) Drop an ingredient on top of an enemy to squash him.

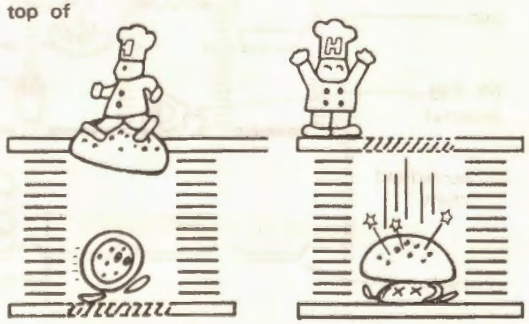

WHEN CHANGING TO A NEW GAME

COCKTAIL TABLE	UPRIGHT
• Unlock and open table — fix the new game explanation.	• Fit top game display panel.

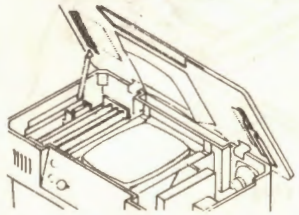

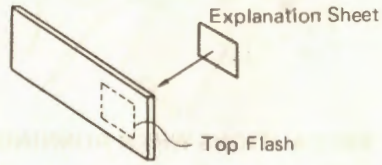

- Insert key module into its bracket on PCB rack. Fit the connector. Be sure to lock it.

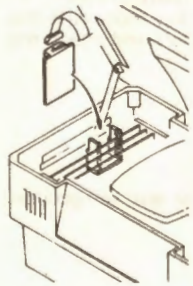

Precaution:
Make sure the cassette and key module code numbers are the same.

I.E. DP - 1265(Module)
DT - 1265(Tape)

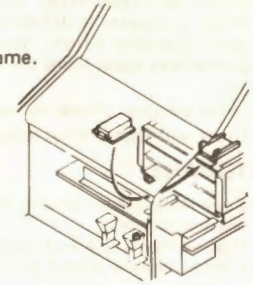

- Make your dipswitch selections and set.
- Be sure the power switch is turned off.

FITTING THE CASSETTE

Be sure power is "OFF" before opening cassette deck door.	Turn power switch off. Open maintenance door. Unscrew wing-bolt and slide the cover down.

- Push eject button and insert tape into tape guide always A-side up.
- Push tape cassette lightly and fold it in.
- Turn power on to begin programming.